



INSTRUCTION SHEET FOR TOOL No.1668



TWIN CAM 88™ "B" ENGINE STAND USE ON ALL 2000 TO PRESENT TWIN CAM 88™ "B" SOFTTAIL ENGINES.

1. This stand can be mounted to a bench using the four holes located at the base of the stand.
2. Use four (4) 3/8" - 16 x 3 1/4" bolts with washers to anchor the rear of the engine to the stand mounting holes.

**CAUTION: WEAR SAFETY GLASSES. EXCESSIVE FORCE MAY DAMAGE PARTS AND TOOL.
SEE JIMS® CATALOG FOR OVER 100 OTHER TOP QUALITY PROFESSIONAL TOOLS.
THE LAST TOOLS YOU WILL EVER NEED TO BUY.**

"From the Track... To the Street!"

555 DAWSON DRIVE, CAMARILLO, CA 93012 PHONE 805-482-6913 • FAX 805-482-7422



INSTRUCTION SHEET FOR TOOL No.1668



TWIN CAM 88™ "B" ENGINE STAND USE ON ALL 2000 TO PRESENT TWIN CAM 88™ "B" SOFTTAIL ENGINES.

1. This stand can be mounted to a bench using the four holes located at the base of the stand.
2. Use four (4) 3/8" - 16 x 3 1/4" bolts with washers to anchor the rear of the engine to the stand mounting holes.

**CAUTION: WEAR SAFETY GLASSES. EXCESSIVE FORCE MAY DAMAGE PARTS AND TOOL.
SEE JIMS® CATALOG FOR OVER 100 OTHER TOP QUALITY PROFESSIONAL TOOLS.
THE LAST TOOLS YOU WILL EVER NEED TO BUY.**

"From the Track... To the Street!"

555 DAWSON DRIVE, CAMARILLO, CA 93012 PHONE 805-482-6913 • FAX 805-482-7422