



## Instruction Sheet For Tool No.1022



### Twin cam 88™ engine stand use on all twin cam 88™ except 2000 & later softail

Refer to H.D.® Service Manual for specifications

1. Can be mounted to bench with the four holes provided in the two legs.
2. Use two 3 / 8" - 16 x 2" bolts to anchor to rear of motor in slots. These bolts are on OEM engine/ transmission assembly.
3. Use two 3 / 8" - 16 x 1 3/4" bolts with nuts to anchor front of motor to stand.

**CAUTION:** Wear safety glasses. Excessive force may damage parts and tool.  
See JIMS® catalog for over 100 other top quality professional tools.  
The last tools you will ever need to buy.

***"From the Track... To the Street!"***

555 Dawson Drive, Camarillo, CA 93012 Phone 805-482-6913 • Fax 805-482-7422



## Instruction Sheet For Tool No.1022



### Twin cam 88™ engine stand use on all twin cam 88™ except 2000 & later softail

Refer to H.D.® Service Manual for specifications

1. Can be mounted to bench with the four holes provided in the two legs.
2. Use two 3 / 8" - 16 x 2" bolts to anchor to rear of motor in slots. These bolts are on OEM engine/ transmission assembly.
3. Use two 3 / 8" - 16 x 1 3/4" bolts with nuts to anchor front of motor to stand.

**CAUTION:** Wear safety glasses. Excessive force may damage parts and tool.  
See JIMS® catalog for over 100 other top quality professional tools.  
The last tools you will ever need to buy.

***"From the Track... To the Street!"***

555 Dawson Drive, Camarillo, CA 93012 Phone 805-482-6913 • Fax 805-482-7422