

Instruction Sheet For Tool #1044-ts



TIMKEN BEARING REMOVER USE ON SPORTSTER 1977-PRESENT

- 1. Refer to H.D.® Service Manual for specifications and instructions for disassembling crank case.
- 2. With flywheels installed on JIMS® Flywheel Rebuilding Jig #1071 and sprocket shaft facing up and clamped tight in vice.
- 3. Install the two halves, #1044-TS-1, with pulling edge under the bearing outer lip. Slip ring #1044-TS-2, over the two halves.
- 4. Lube the threads of bolts #2007, slip one washer, #2014, over each bolt. Align puller bar over the two halves, thread in both bolts the same distance, as far in as possible.
- 5. Lube threads and tip of screw #1024, with JIMS® #2124 Lube. Thread through puller bar until bearing is pulled from sprocket shaft.

No. Qty. Description BEARING HOLDER - TWO HALVES 1044-TS-1

PARTS AVAILABLE SEPARATELY

1 RING 1044-TS-2 3 2 BOLT 2007 PULLER BAR 2013 FLAT WASHER 2014 SCREW

> CAUTION: WEAR SAFETY GLASSES. EXCESSIVE FORCE MAY DAMAGE PARTS AND TOOL. SEE JIMS® CATALOG FOR OVER 100 OTHER TOP QUALITY PROFESSIONAL TOOLS. THE LAST TOOLS YOU WILL EVER NEED TO BUY.

> > "From The Track... To The Street!"

555 DAWSON DRIVE, CAMARILLO, CA 93012 • PHONE 805-482-6913 • FAX 805-482-7422

No.1044-IS



REV NC 7/01

INSTRUCTION SHEET FOR TOOL #1044-TS



PAKIS AVAILABLE SEPAKAIELY				KAIELY
ľ	No.		Qty. Description	Part No.
ľ	1	1	BEARING HOLDER - TWO HALVES	1044-TS-1
ľ	2	1	RING	1044-TS-2
	3	2	BOLT	2007
	4	1	PULLER BAR	2013
	5	2	FLAT WASHER	2014
	6	1	SCREW	1024

TIMKEN BEARING REMOVER USE ON SPORTSTER 1977-PRESENT

- 1. Refer to H.D.® Service Manual for specifications and instructions for disassembling crank case.
- 2. With flywheels installed on JIMS® Flywheel Rebuilding Jig #1071 and sprocket shaft facing up and clamped tight in vice.
- 3. Install the two halves, #1044-TS-1, with pulling edge under the bearing outer lip. Slip ring #1044-TS-2, over the two halves.
- 4. Lube the threads of bolts #2007, slip one washer, #2014, over each bolt. Align puller bar over the two halves, thread in both bolts the same distance, as far in as possible.
- 5. Lube threads and tip of screw #1024, with JIMS® #2124 Lube. Thread through puller bar until bearing is pulled from sprocket shaft.

CAUTION: WEAR SAFETY GLASSES. EXCESSIVE FORCE MAY DAMAGE PARTS AND TOOL. SEE JIMS® CATALOG FOR OVER 100 OTHER TOP QUALITY PROFESSIONAL TOOLS. THE LAST TOOLS YOU WILL EVER NEED TO BUY.