

REV C 4-13


INSTRUCTION SHEET FOR NO.2347-7, 2347-7C, 2347-7B & 2347-7CB



BILLET TRANSMISSION DOOR USE ON BIG TWIN 1980-2006

Note: JIMS[®] recommends removal of transmission components to install billet door, that way the condition of the gears and shafts can be checked. If there is a problem JIMS[®] makes all the necessary components for the 5 speed transmission.

- 1. Refer to H.D.[®] Service Manual for transmission removal.
- 2. Use JIMS tool No.2283 to remove trap door from case. Also use No.2189 to remove shafts from door bearings.
- 3. To install billet transmission door with transmission removed from case, refer to H.D[®] Service Manual to remove transmission door. JIMS[®] recommends installing new door bearings, JIMS[®] No.8998K and 11029K retainers. Use JIMS[®] Tool No.1014, for removing and installing bearings.
- 4. Use JIMS[®] External Lock Ring Pliers #2362 to remove all mainshaft and countershaft retaining rings. Note each gear and it's location as it is removed. Always replace retaining rings.

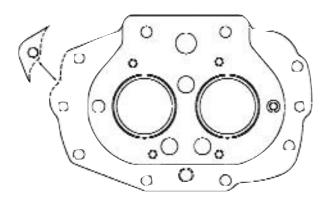

Note: Installation of this door on all models with oil tank on bottom of transmission, FLHT, will require a slight modification. Trim trap door using a saw. Remove material as shown in diagram above. Use old trapdoor as a template. The drain plug No.2389 will also need to be modified to clear stock exhaust bracket.

Pre-Cut door are available: No. 2347-75C (Chrome)

CAUTION: WEAR SAFETY GLASSES. EXCESSIVE FORCE MAY DAMAGE PARTS AND TOOLS! SEE JIMS® CATALOG FOR OVER 100 OTHER TOP QUALITY PROFESSIONAL TOOLS. THE LAST TOOLS YOU WILL EVER NEED TO BUY.

"FROM THE TRACK... TO THE STREET!"

555 DAWSON DRIVE, CAMARILLO, CA 93012 • PHONE 805-482-6913 • FAX 805-482-9224