



A Division of Thiessen Products, Inc.

INSTRUCTION SHEET FOR TOOL NO. 5805

JIMS® NO. 5805 WRIST PIN REMOVER ADAPTER IS DESIGNED TO BE USED WITH JIMS® NO. 1276 WRIST PIN REMOVER TOOL ON 2017-PRESENT MILWAUKEE 8 FOUR VALVE ENGINES.

Note: Always wear safety glasses or other face and eye protection such as a full face shield. JIMS is not responsible for damage, injury, or your work. JIMS cannot be held liable for the quality and safety of your work.

Instructions

1. Remove cylinders per H-D Service Manual.
2. Remove wrist pin retaining rings from both sides of the wrist pin. If Washer No. 1276-3 will clear retaining ring inner diameter, only one wrist pin retaining ring will need to be removed before extracting wrist pin.

Caution: Wear safety glasses or full face shield, retaining rings are under extreme pressure.

Note: Cover piston with a clean rag to prevent ring from flying and/or entering the crankcase.

3. Install No. 5805 Wrist Pin Remover Adapter against side of piston, centered over wrist pin, then insert Threaded Rod No. 1276-1 through No. 5805 Adapter, then through wrist pin. Install No. 1276-3 washer and No. 2035 Nut. **Note:** Apply lubricant to threads and face of handle.
4. Turn No. 1276-4 Remover Handle against No. 5805 Wrist Pin Remover Adapter until wrist pin is sufficiently removed from piston.
5. Repeat steps 1-4 for the other wrist pin.



Performance Parts For Harley-Davidson Motorcycles

555 DAWSON DRIVE, CAMARILLO, CA 93012 PHONE 805-482-6913 • FAX 805-482-9224
VISIT US ON THE WEB AT WWW.JIMSUSA.COM



A Division of Thiessen Products, Inc.

INSTRUCTION SHEET FOR TOOL NO. 5805

JIMS® NO. 5805 WRIST PIN REMOVER ADAPTER IS DESIGNED TO BE USED WITH JIMS® NO. 1276 WRIST PIN REMOVER TOOL ON 2017-PRESENT MILWAUKEE 8 FOUR VALVE ENGINES.

Note: Always wear safety glasses or other face and eye protection such as a full face shield. JIMS is not responsible for damage, injury, or your work. JIMS cannot be held liable for the quality and safety of your work.

Instructions

1. Remove cylinders per H-D Service Manual.
2. Remove wrist pin retaining rings from both sides of the wrist pin. If Washer No. 1276-3 will clear retaining ring inner diameter, only one wrist pin retaining ring will need to be removed before extracting wrist pin.

Caution: Wear safety glasses or full face shield, retaining rings are under extreme pressure.

Note: Cover piston with a clean rag to prevent ring from flying and/or entering the crankcase.

3. Install No. 5805 Wrist Pin Remover Adapter against side of piston, centered over wrist pin, then insert Threaded Rod No. 1276-1 through No. 5805 Adapter, then through wrist pin. Install No. 1276-3 washer and No. 2035 Nut. **Note:** Apply lubricant to threads and face of handle.
4. Turn No. 1276-4 Remover Handle against No. 5805 Wrist Pin Remover Adapter until wrist pin is sufficiently removed from piston.
5. Repeat steps 1-4 for the other wrist pin.



Performance Parts For Harley-Davidson Motorcycles

555 DAWSON DRIVE, CAMARILLO, CA 93012 PHONE 805-482-6913 • FAX 805-482-9224
VISIT US ON THE WEB AT WWW.JIMSUSA.COM